

07.3-230 Removal, reinstallation of throttle assembly

Preceding operation: Removal, reinstallation of mixture control unit with air guide housing (07.3-225)

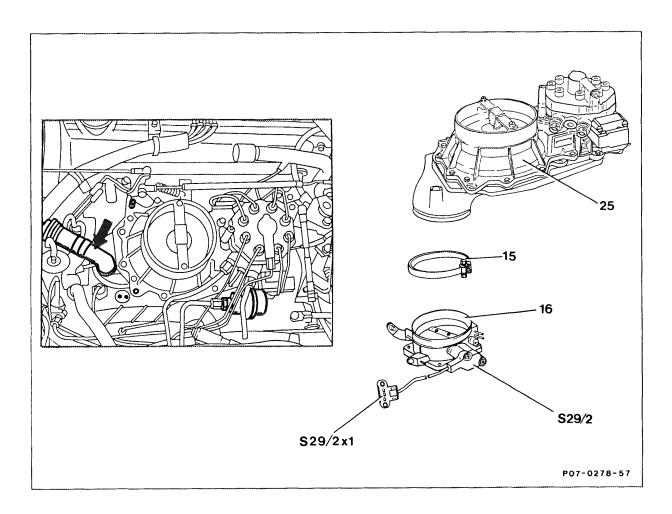

Shaped hose (arrow) for idle speed adjuster	remove, mount.
Hose clamp (15)	loosen, secure.
Control linkage and return spring	disconnect, reconnect.
Connector (throttle valve switch)	
(S29/2x1)	unscrew, screw on and pull out.
Vacuum connections	disconnect, refit. Ensure proper connection.
Mounting screws	remove. Throttle assembly, remove. Mount with new gasket.
Idle speed	adjust.

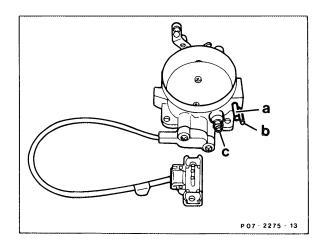

- To exhaust gas recirculation thermovalve
 To fuel evaporation system thermovalve
 From purge valve
 To exhaust gas recirculation vacuum control valve (up to 09/87 or model year 1988) c d